





KRUEGER SENTRY GAUGE®

The Therma Gauge—Type H

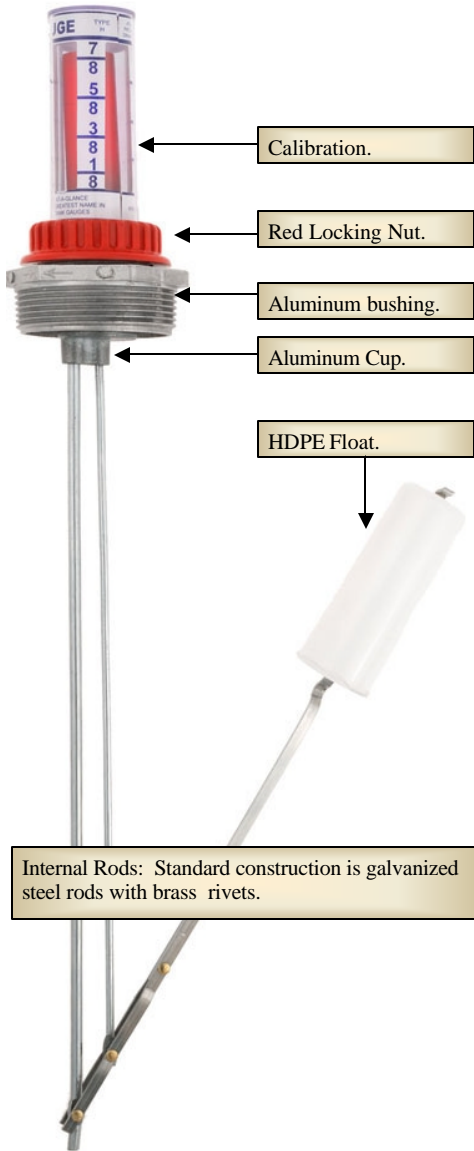

Installation Instructions:

1. Unthread the red locking nut. Separate the aluminum bushing from the rest of the gauge. (do not lose the rubber gasket)
2. Thread the aluminum bushing into the female fitting on the top of your tank.
3. Drop gauge through the center of the aluminum bushing float first. Be sure your gasket is still in between the top of the bushing and the small aluminum cup.
4. Be sure your swing arm is pointing to an open spot in the tank, avoiding walls, corners, baffles or other obstructions.
5. Tighten your red locking nut and calibration down to the aluminum bushing. **Hand** tighten the red nut until snug. (until the plastic calibration cannot spin.)

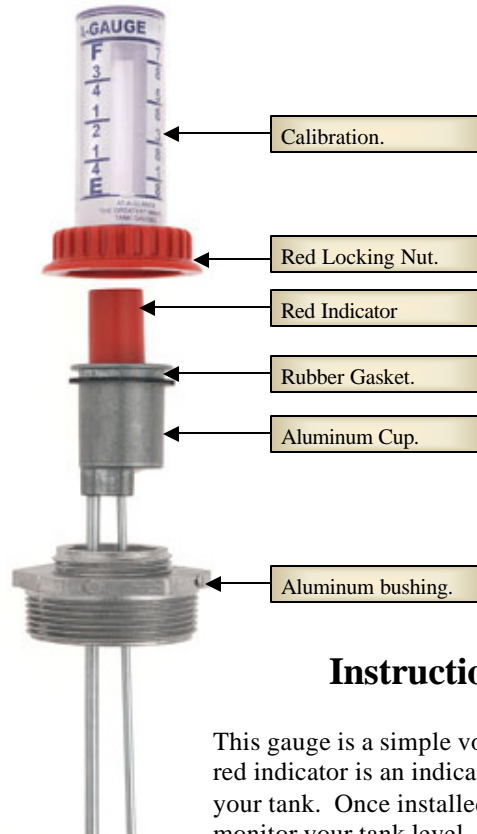

Instructions for Operation:

This gauge is a simple volume reading tool. The top of the red indicator is an indication of your approximate fuel level in your tank. Once installed, you simply view the calibration to monitor your tank level. Indicator is calibrated in eighths of a tank on one side, and quarters of a tank on the other.

Krueger Sentry Gauge
1873 Siesta Lane
Green Bay, WI 54313

www.ksentry.com



Contact us for more info:
Ph: 920-434-8860
Fax: 920-434-8897

Email: info@ksentry.com