




KRUEGER SENTRY GAUGE®

The Therma Gauge—Type H All SS

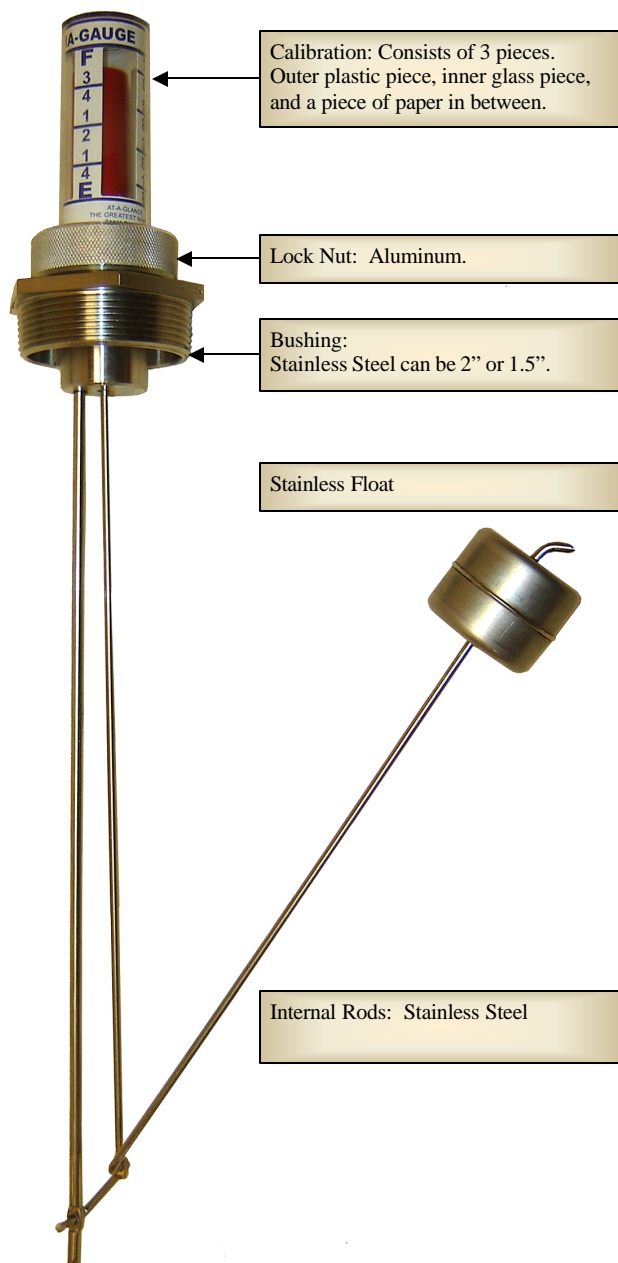

Installation Instructions:

1. Unthread the aluminum locking nut. Separate the stainless bushing from the rest of the gauge. Do not lose the rubber gasket. Do not drop the glass piece that is inside the calibration. It will fall out.
2. Lower the gauge through the opening on the top of your storage container float first. Be sure your gasket is still in between the top of the bushing and the small stainless cup.
3. Thread the stainless bushing into the female fitting on the top of your storage container.
4. Be sure your swing arm is pointing to an open spot in the tank, avoiding walls, corners, baffles or other obstructions.
5. Tighten your aluminum locking nut and calibration down to the stainless bushing. There should be a gasket between the glass calibration and the stainless cup. **Hand** tighten the aluminum nut until snug. (until the calibration cannot spin.)
6. **Do not over tighten the nut or the glass calibration will break.**

Instructions for Operation:

This gauge is a simple volume reading tool. The top of the red indicator is an indication of your approximate fuel level in your tank. Once installed, you simply view the calibration to monitor your tank level. Indicator is calibrated in eighths of a tank on one side, and quarters of a tank on the other.

Krueger Sentry Gauge
1873 Siesta Lane
Green Bay, WI 54313

www.ksentry.com



Contact us for more info:
Ph: 920-434-8860
Fax: 920-434-8897

Email: info@ksentry.com