

Leak Gauge Maintenance Procedures

Krueger Sentry Gauge
Lee Geurts
1873 Siesta Lane
Green Bay, WI 54313

Possible Problems:

The Leak Gauge can fail in one of three ways.

- The calibration assembly on the outside of the tank can become weathered, unreadable, or broken.
- The connecting rods that extend into the tank can come apart or become damaged.
- The float that sits at the bottom of the tank can come off or become saturated with product.

Recommended Maintenance Procedures

- Once per month: Inspect the top of the unit once per month to ensure that the calibration is visible, readable, and unbroken.
- Once every 6 months: Unthread the unit and carefully remove it from the tank. Be sure all rods are connected as one piece all the way down to the float. Also inspect the float for damage.

Any questions in regards to your Leak Detection Gauge should be directed to Lee Geurts.

Lee Geurts
Ph 920-434-8860 Ext 204
Fax 920-434-8897
Email – lee@ksentry.com