




KRUEGER SENTRY GAUGE®

The Therma Gauge—Type H

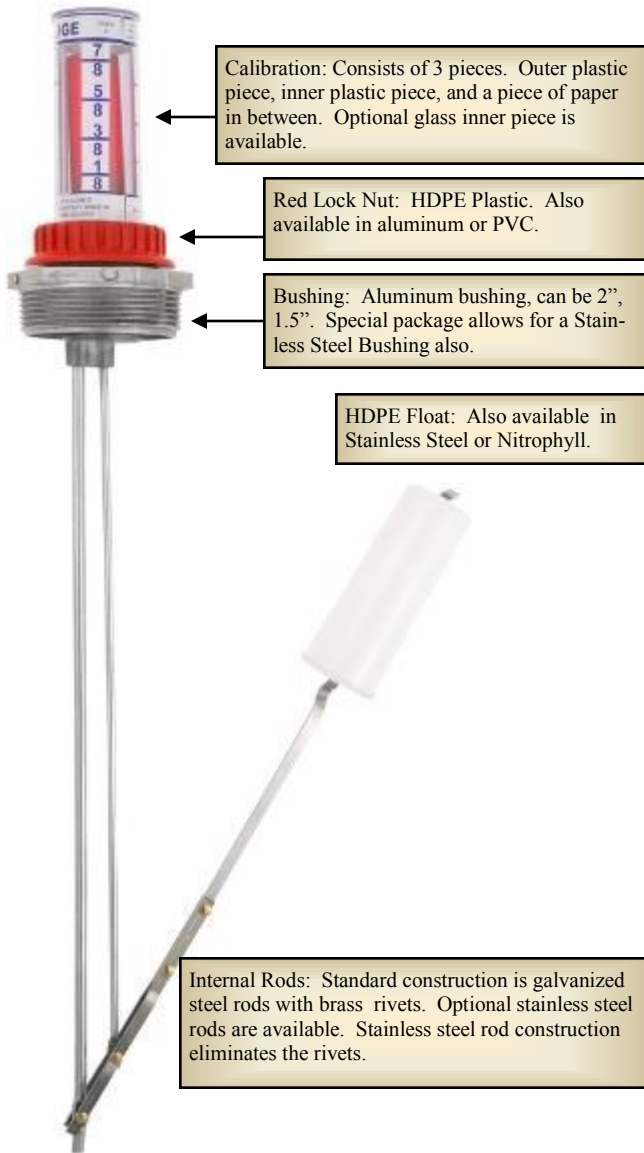

Calibration: Consists of 3 pieces. Outer plastic piece, inner plastic piece, and a piece of paper in between. Optional glass inner piece is available.

Red Lock Nut: HDPE Plastic. Also available in aluminum or PVC.

Bushing: Aluminum bushing, can be 2", 1.5". Special package allows for a Stainless Steel Bushing also.

HDPE Float: Also available in Stainless Steel or Nitrophyll.

Internal Rods: Standard construction is galvanized steel rods with brass rivets. Optional stainless steel rods are available. Stainless steel rod construction eliminates the rivets.

Part Number—
H-(size opening)-(tank depth)+(ext)-(list options)
Sample—H-2-48+12

What it is:

Top mounted liquid level gauge that can measure from 6 inches to 144 inches in depth. Bushing size can be 2" or 1.5". Gauges are custom made in house to fit your tank. Can also accommodate for double walls and pipe risers. The Type H Gauge has a 2 piece bushing construction that allows you to aim your swing arm away from walls, corners, and other obstructions.

Additional Options:

Audible Alarm Accessory: This add on feature can turn your mechanical gauge into an audible Hi or Lo level alarm.

LED At-A-Glance Accessory: Another add on feature. This can give your mechanical gauge remote reading capability.

Gauge Guard: A cover that protects the exposed plastic components on top of the gauge.

Material Packages / Gauge Packages:

- **Standard Therma Gauge-Type H-**Rods are galvanized steel, floats are HDPE plastic, bushing is aluminum, calibration top is plastic.
- **Stainless Level One-Type H-S1-** Rods become stainless.
- **Stainless Level Two-Type -H-S2-** Rods and floats become stainless.
- **Stainless Level Three-Type H-S3-** This model comes standard with Glass Calibration, Aluminum Locking Nut, Stainless Steel Bushing, Stainless Steel Rods, and Stainless Steel Floats.
- **All Plastic Model—Type PH—**This model comes standard with Glass Calibration, PVC Gauge Guard, PVC Bushing, PEEK Plastic Rods, HDPE Plastic Float.

Krueger Sentry Gauge
1873 Siesta Lane
Green Bay, WI 54313

www.ksentry.com



Contact us for more info or a local distributor:

Ph: 920-434-8860

Fax: 920-434-8897

Email: info@ksentry.com



KRUEGER SENTRY GAUGE®

Therma Gauge Accessories and Replacement Parts

Accessories



Glass Calibration



Gauge Guard



Aluminum Lock Nut



Led At A Glance



Direct Mount Alarm



Remote Alarm

LED At A Glance Remote Display- Turns the direct reading Therma gauge into a wired remote reading gauge.

(part # add -Ledaag)

Direct Mount Alarms- Audible alarm that mounts directly to the gauge and provides your choice of overfill or low level warnings.

(part # add -Dalarm)

Remote Mount Alarms- Audible alarm that can be remotely wired and provides your choice of overfill or low level warnings.

(part # add -Ralarm)

Aluminum Lock Nut- Replace the red lock nut for added durability.

(part # add -ALN)

Gauge Guard- Protective Cover that replaces the red locking nut providing protection from physical damage and weathering damage.

Also helps with passing fire inspections.

(part # add -ALG)

Glass Calibration- The internal piece of the calibration becomes glass. Provides protection from heat, fumes, weathering, and also helps with passing fire inspections. (part # add -GLC)

Replacement Parts

- **H-Kit-** Replaces all the top components with standard materials.
- **HG-Kit** Replaces all the top components with standard materials and a glass calibration.
- **HALN-Kit-** Replaces all the top components with standard materials and an aluminum lock nut.
- **HGALN-Kit-** Replaces the top components with a glass calibration and aluminum lock nut.



Krueger Sentry Gauge
1873 Siesta Lane
Green Bay, WI 54313

www.ksentry.com



KRUEGER SENTRY GAUGE®

Contact us for more info or a local distributor:
Ph: 920-434-8860
Fax: 920-434-8897
Email: info@ksentry.com



KRUEGER SENTRY GAUGE®

Ordering, Installation, Maintenance and Operation

Ordering Instructions:

Part Number Layout-

H-(Opening Size)-(tank depth)-(ext. length)-(material package)-(options)

1. State the gauge type (Type H for metal or Type PH for all plastic)
2. State the opening size your are using. (1.5"---2")
3. State the tank depth (pictured left). Tank depth is the distance from empty to full.
4. When necessary, provide the extension length (pictured left). Extension length is the distance from full to gauge threads. (sometimes zero)
5. List the material package you prefer for best compatibility with your liquid. Material packages are explained on page 1 of this document. Skip this if you want standard materials
6. List other material options and accessories that you prefer. These options and accessories can be located on page 2 of this document. Skip this if you want standard materials.

Example Part numbers

- H-2-48-12-S3
- H-2-24-GLC



Maintenance:

The Therma Gauge can fail in one of three ways.

- The calibration assembly on the outside of the tank can become weathered, unreadable, or broken.
- The connecting rods that extend into the tank can come apart or become damaged.
- The float that sits at the bottom of the gauge can come off or become saturated with product (leak).

Recommended Maintenance Procedures:

- Once per month: Inspect the top of the unit once per month to ensure that the calibration is visible, readable, and unbroken. (these top pieces can be easily replaced without having to replace the whole gauge)
- Once every 6 months: Unthread the unit and carefully remove it from the tank. Be sure all rods are connected as one piece from the red indicator all the way down to the float. Also inspect the float for damage or leakage. To ensure proper working order, manually raise the float arm from empty to full to be sure that the red indicator freely moves up and down with the motion of the float rod.
- When performing maintenance, be sure to follow the installation instructions above to prevent damaging the gauge

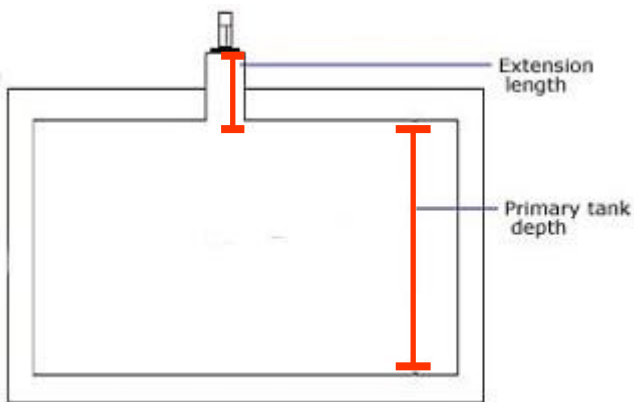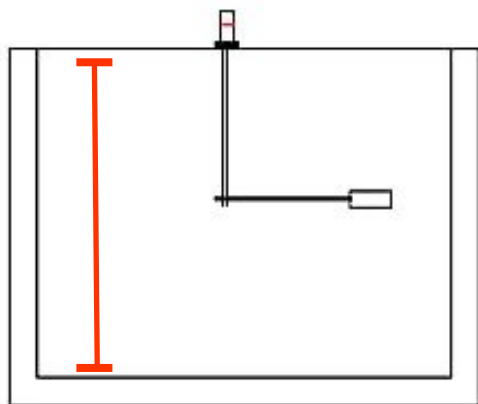

Installation Instructions:

When installing, unthread the red nut and remove the calibration and bushing. Thread in the bushing first. Drop the gauge through the center hole, make sure your swing arm is facing in the direction you want. Replace the calibration and tighten down your red locking nut.

Instructions for Operation:

The top of the red indicator is an indication of your approximate fuel level in your tank. Once installed, you simply view the calibration to monitor your tank level. Indicator is calibrated in eighths of a tank on one side, and quarters of a tank on the other as well as Gallons and Liters.

Krueger Sentry Gauge
1873 Siesta Lane
Green Bay, WI 54313
www.ksentry.com




Contact us for more info:
Ph: 920-434-8860
Fax: 920-434-8897
Email: info@ksentry.com



KRUEGER SENTRY GAUGE®

The Therma Gauge—FAQ, Troubleshooting

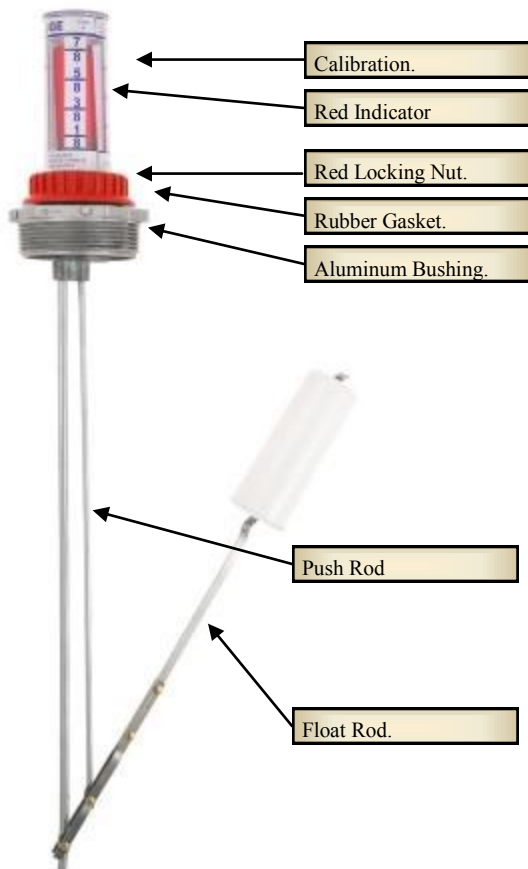

Frequently Asked Questions:

Q: What is the difference between the Therma Gauge and the standard Direct Reading Gauge.

A: The two gauges are nearly identical, but the Therma gauge has a two piece bushing. This allows you to remove the bushing, thread it in, then drop the gauge in and point the swing arm in the direction of your choice. This makes installation easier when your fitting is near a wall/corner or if you have baffles/obstructions in your tank that you need to avoid.

Q: The top plastic portion of my gauge has become damaged or weathered, what can I do?

A: The top of the gauge is easily replaced, just order a H-Repair Kit which replaces all of the top components of the gauge.

Q: How can I prevent the top of my gauge from becoming weathered or warped in the future?

A: Several upgrades exist that improve the life and performance of the gauge. The glass calibration, which makes the internal part of the calibration into glass, increases the gauges resistance to heat, fumes, and sun.

Q: My gauge top keeps getting broken by hoses/weather/people, do you have a more durable option?

A: We offer something called a Gauge Guard. This is an aluminum cage that replaces the red lock nut and protects the top of your gauge from physical damage and weathering.

Q: The fire inspector says my gauge is not up to code? How can I satisfy their requirements.

A: If you get the glass calibration and the gauge guard, you are creating a glass and metal barrier between the inside of the tank and the external environment. Explain this to your inspector and see if it satisfies their requirements.

Q: I have aggressive chemicals that I need to gauge, will this work?

A: Our gauge has many material options, including all stainless components or all plastic components. We can help with determining what material option you need, but compatibility is ultimately the end users decision.

Krueger Sentry Gauge
1873 Siesta Lane
Green Bay, WI 54313
www.ksentry.com



Contact us for more info:
Ph: 920-434-8860
Fax: 920-434-8897
Email: info@ksentry.com